

Mister Landscaper

Micro Sprinkler & Drip Irrigation



MisterTimer

User Instructions

English

Batteries


Install 2 AA Alkaline batteries by pulling the battery holder straight from the back of the Timer (if desired, a flathead screwdriver can be used for leverage). Now insert the batteries as indicated and replace the holder. Once installed, the LCD screen will be working, and the letters "OFF" will be flashing beside "Manual".



Programming the Timer

Remove the clear protective film from the face of the Timer.

Press the UP key until the numbers beside "Time" are flashing.

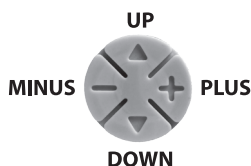

Set the current time using the PLUS and MINUS keys. By holding the key down the time will change rapidly. A tap will cause a stepped change. Once you have set the correct time, use the DOWN arrow key to move to the next section.

Select when you want to begin watering in the "Start Water" section. Again adjust the time using the PLUS and MINUS keys. Move to the next section.

Set how long you wish the water to run in the "Water For" section. This time can be adjusted from 1 up to 240 minutes. Move to the next section.

Select how often you would like to water in the "Water Every" section. This is set in hours or days.

- "4 HRS" = 6x Day
- "6 HRS" = 4x Day
- "8 HRS" = 3x Day
- "12 HRS" = 2x Day
- "1 DAY" = Every Day
- "2 DAY" = Every 2 Days
- "3 DAY" = Every 3 Days
- "4 DAY" = Every 4 Days
- "5 DAY" = Every 5 Days
- "6 DAY" = Every 6 Days
- "7 DAY" = Every 7 Days

Activate the program by adjusting the "Program" section to ON. Now watering will begin at the "Start Water" time.

The Timer is now programmed. "ON" will flash for 5 seconds and then stop. The Timer screen will go blank after 5 minutes to conserve power. The current time and program status, "ON" or "OFF", will remain visible. Pressing any button will wake the timer screen.

Changing the Program

To make a change to the program, simply wake the timer by pressing any button. Move to the sections you wish to change and adjust as needed. Once completed, watering will resume at the "Start Water" time.

Manual Watering

Using the UP and DOWN arrows, move to the "Manual" section. Using the PLUS button, adjust the amount of time you wish to water from 5 minutes up to 240 minutes. The Timer will wait 5 seconds and begin to water. Once manual watering is complete, the Timer will return to its programmed settings.

Rain Delay

In the event of predicted rainfall, you can temporarily suspend automatic watering for up to 3 days. Simply move to the "Rain Delay" section and use the plus button to select the desired delay. After the delay period has passed, the Timer will return to its programmed settings.

Disabling the Program

If you would like to suspend automatic watering for an extended period, simply change the "Program" section to "OFF". When you are ready to resume watering, switch "Program" to "ON". Watering will begin at the "Start Water" time.

Program Memory

This Timer has memory. If the battery fails or is removed, even for extended periods, the program will be retained. After installing a fresh battery you simply need to set the current time. The Timer will retain the existing program settings.

Installing the Timer

Attach the Timer directly to an outside faucet and turn on the water.

Winterizing


Remove the Timer prior to the first freeze and store indoors until spring. Remember to remove the batteries while in storage.

Operating Tips

Check your Timer every couple weeks to ensure proper operation.

What Goes First on the Faucet

Here is a guide for installing Mister Landscaper Micro-Sprinkler and Drip irrigation products with this Timer. For proper function, products must be installed in this order:

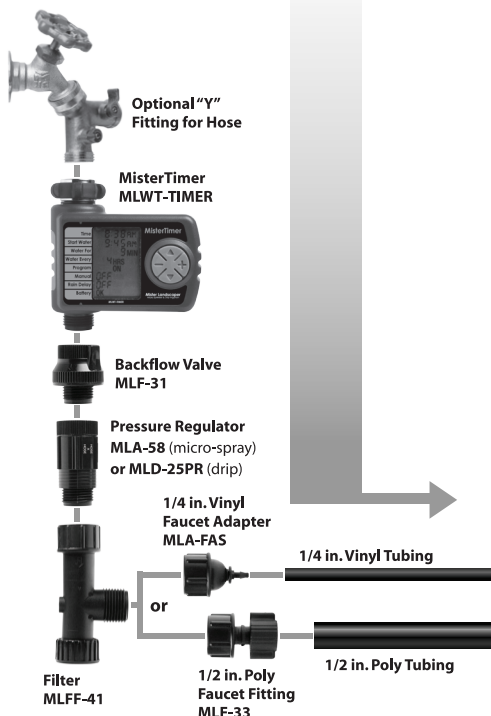

Mister Landscaper

Micro Sprinkler & Drip Irrigation

Mister Landscaper Inc
PO Box 1849
Dundee, FL 33838

www.misterlandscaper.com
sales@misterlandscaper.com
(863) 439-3200